Lafferty Equipment Manufacturing, Inc. Installation & Operation Instructions

Model # 981300 · 3-Way Push Lever Mixing Station

| REQUIREMENTS | | |
|-----------------------------|---------------|--|
| Water: | | |
| Temperature | up to 160°F | |
| Pressure | 25-125 PSI | |
| Supply Line | 1/2" Minimum | |
| Flow: | | |
| High Flow (Black Injector) | 4.0 - 7.3 GPM | |
| Low Flow (White Injector) | 1.9 - 3.4 GPM | |
| Bottle Fill (Blue Injector) | 0.6 - 1.0 GPM | |

| Bottle Fill (Blue Injector) | 0.6 - 1.0 GPM |
|---|---------------|
| OPTIONS | |
| Stainless Steel Jug Racks | |
| 1 Gallon Round/Square | # 224200 |
| 1 Gallon Round/Square Locking | # 224200-L |
| 2 ½ Gallon (8 ½" x 10 ½") | # 224210 |
| 5 Gallon (12" x 12") | # 224215 |
| 5 Gallon Round Locking | # 224216 |
| Safe Flow Lid™ for 1 Gallon Jugs | |
| Lid, Suction Tube, and Strainer | # 709101 |
| Alternate Chemical Check Valve - El | PDM Standard |
| Check Valve, Chemical, PP, 1/4" (Viton) | # 491402 |

| WEIGHT & DIMENSIONS | |
|-----------------------------------|----------------|
| Single Package Shipping Weight | 11 lbs. |
| Shipping Dimensions | 15" x 15" x 5" |





www.laffertyequipment.com 501-851-2820



WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The 3-Way Push Lever Mixing Station is a chemical proportioner for accurately diluting 3 chemical concentrates to required ratios and filling any sized container with diluted, ready-to-use chemical solutions. This venturi injection system uses city water pressure (25 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Push Lever Mixing Stations require the user to push and hold the lever to dispense. Available with separate flow rates for each lever to dispense into any sized container or equipment.

SAFETY & OPERATIONAL PRECAUTIONS

- For proper performance do NOT modify hose diameter or length.
- Do NOT attempt to install a discharge ball valve.
- Manufacturer assumes no liability for the use or misuse of this unit.
- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Contamination of your potable water supply can occur without proper backflow prevention.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- · Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- Never use chemicals that if accidentally mixed could be dangerous.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

- 1. DO NOT MOUNT until metering tips and all tubes are installed.
- 2. Once metering tips and tubes are installed mount to a suitable surface above the chemical.

Set the chemical dilution ratio by threading one of the color coded metering tip into each tip holder. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Select and thread the tip color that is closest to your desired chemical strength into the tip holder as a starting place.
- Application results will ultimately determine final tip color.
- Push the chemical tubes over the tip holders and place the strainer in the chemical concentrate.
- Push the discharge tubes completely over the barbs.

If a leaner solution than the maximum shown in the chart is required, it will be necessary to use one proportioner to predilute the concentrate, and a second to dilute the resulting solution to the required final ratio. If this procedure is required, choose two metering tips whose ratios, when multiplied together, result in a ratio that is as close to the required final ratio as possible.

Example: for the bottle fill proportioner use a White Tip (37:1) and a Corn Yellow Tip (21:1) to achieve a final solution ratio of 777:1.

TO OPERATE

- 1. Once metering tips are installed, connect the chemical and discharge tubes as shown in the diagram.
- 2. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
- 3. To prevent blocking the small water jets in the injector flush any new plumbing of debris before connecting. If water piping is older and has known contaminants, install a water filter.
- 4. Connect water supply.
- 5. Immerse the chemical strainers into your chemical concentrates.
- 6. Hold the discharge tube inside the container to be filled, do not release it, completely depress the push lever.
- When container is filled to the desired level, release the lever and keep the discharge tube in the container till it completely drains before removing it.
- Make final metering tip adjustments based on application results. Try the next larger sized metering tip until the results are acceptable.


| | METERING TIP SELECTION | | | | |
|---------------------------------|--|--------------|----------------------------|-------------|----------------|
| | METERING | FL-OZ PER | DILUTION RATIO @ 40 PSI | | |
| | TIP COLOR | MIN | HIGH FLOW | LOW FLOW | BOTTLE FILL |
| ĺ | Brown | 0.56 | 1031:1 | 480:1 | 142:1 |
| | Clear | 0.88 | 656:1 | 305:1 | 90:1 |
| ĺ | Bright Purple | 1.38 | 418:1 | 195:1 | 58:1 |
| ĺ | White | 2.15 | 269:1 | 125:1 | 37:1 |
| | Pink | 2.93 | 197:1 | 92:1 | 27:1 |
| ĺ | Corn Yellow | 3.84 | 150:1 | 70:1 | 21:1 |
| | Dark Green | 4.88 | 118:1 | 55:1 | 16:1 |
| | Orange | 5.77 | 100:1 | 47:1 | 14:1 |
| | Gray | 6.01 | 96:1 | 45:1 | 13:1 |
| | Light Green | 7.01 | 82:1 | 38:1 | 11:1 |
| | Med. Green | 8.06 | 72:1 | 33:1 | 10:1 |
| | Clear Pink | 9.43 | 61:1 | 29:1 | 8:1 |
| | Yellow Green | 11.50 | 50:1 | 23:1 | 7:1 |
| | Burgundy | 11.93 | 48:1 | 23:1 | 7:1 |
| | Pale Pink | 13.87 | 42:1 | 19:1 | 6:1 |
| | Light Blue | 15.14 | 38:1 | 18:1 | 5:1 |
| | Dark Purple | 17.88 | 32:1 | 15:1 | 4:1 |
| İ | Navy Blue | 25.36 | 23:1 | 11:1 | 3:1 |
| | Clear Aqua | 28.60 | 20:1 | 9:1 | 3:1 |
| ĺ | Black | 50.00 | 12:1 | 5:1 | |
| No Tip Ratio Up To: 4.8:1 3.5:1 | | | 3.5:1 | 1.7:1 | |
| | The dilution ratios above are approximate values. Due to | | | | |

The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Dilution ratio = fl-oz/min

| FLOW RATES | | | |
|------------|-----------|----------|-------------|
| PSI | GPM | | |
| 5 | HIGH FLOW | LOW FLOW | BOTTLE FILL |
| 35 | 4.22 | 1.96 | 0.58 |
| 40 | 4.51 | 2.10 | 0.62 |
| 50 | 5.04 | 2.35 | 0.69 |
| 60 | 5.52 | 2.57 | 0.76 |
| 70 | 5.97 | 2.78 | 0.82 |
| 80 | 6.38 | 2.97 | 0.88 |
| 90 | 6.77 | 3.15 | 0.93 |
| 100 | 7.13 | 3.32 | 0.98 |
| 110 | 7.48 | 3.48 | 1.03 |
| 120 | 7.81 | 3.64 | 1.07 |
| 125 | 7.97 | 3.71 | 1.10 |

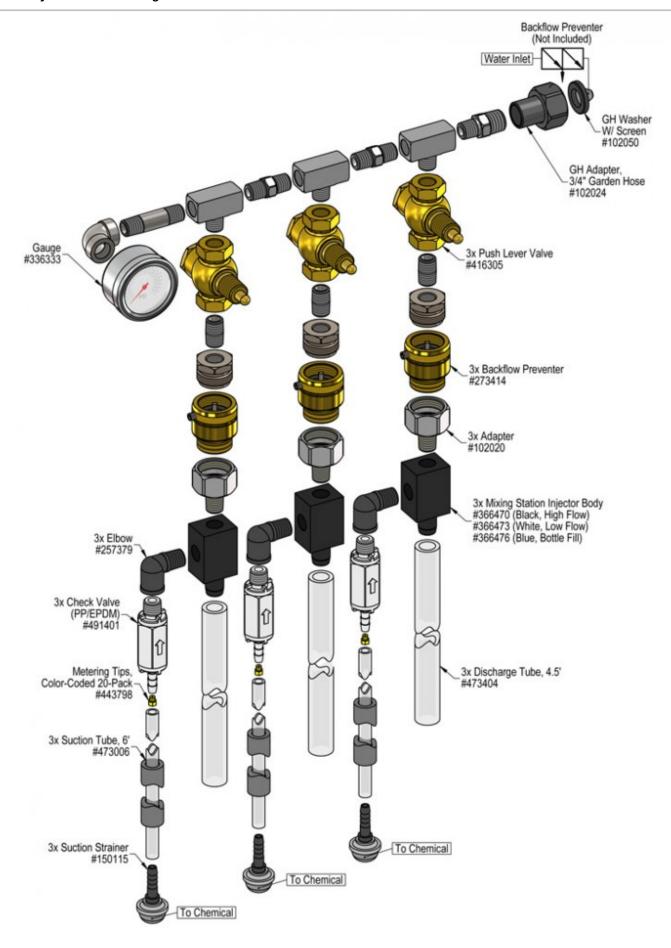

- Page 3 -

| Problem | Possible Cause / Solution | | |
|--|---------------------------|--------------------|--|
| Problem | Startup | Maintenance | |
| A) Unit will not draw chemical. | 1, 2, 3 | 6, 7, 8, 9, 10, 11 | |
| B) Dilution too weak. | 4 | 11 | |
| C) Dilution too strong | 5 | | |
| D) Water backing up into chemical container. | | 8 | |
| E) Backflow preventer constantly dripping / leaking. | | 12 | |

| Possible Cause / Solution | | |
|---|--|--|
| Startup | Maintenance | |
| 1. Water pressure too low or water temperature too high 35 PSI water pressure minimum. | 6. Water inlet strainer screen clogged • Disconnect water and clean the screen. | |
| 2. Push lever not completely depressedCompletely depress the push lever | 7. Chemical strainer or metering tip partially blocked • Clean or replace chemical strainer and/or metering tip. | |
| 3. Chemical tube not immersed in chemical or chemical depleted • Immerse tube or replenish. | 8. Foot valve stuck or failed • Clean or replace. 9. Vacuum leak in chemical pick-up connections | |
| 4. Metering tip too smallo Install larger metering tip. | Tighten the connection. 10. Chemical tube stretched out where it slides over metering | |
| 5. No metering tip installed or metering tip too largeInstall smaller metering tip. | tip holder or pin hole/cut in chemical tube (sucking air in) • Cut off end of tube or replace tube. | |
| | 11. Water scale or chemical build-up may have formed in the body causing poor or no chemical pick-up • Follow Preventive Maintenance instructions below, using hotwater and/or descaling acid. When there is no draw at all carefully remove fittings and soak entire body in descaling acid. | |
| | 12. Backflow preventer failed or defective ∘ Replace backflow preventer. | |

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

April 7th 2016 - Page 4 - **